



Thanks ! We hope you will enjoy your new TOKK TSA Approved Fingerprint Lock.

Pred Limited Warranty

Pred Technologies USA Inc. warrants this product against defects in material or workmanship as follows:

1.Labor and Parts: If this product is determined to be defective. Pred Technologies will repair or replace the product, at its option, at no charge. From and for a period specified by the retail partner you have purchased our product from.

 
2.Proof of purchase in the form of a bill of sales or receipted invoice which is evidence that the unit is within the Warranty period must presented to obtain warranty service.

3.To obtain warranty service, please contact our customer support center:

Via email contact@tokktech.com or call 1 (858) 999-2114 ext 1

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Thanks

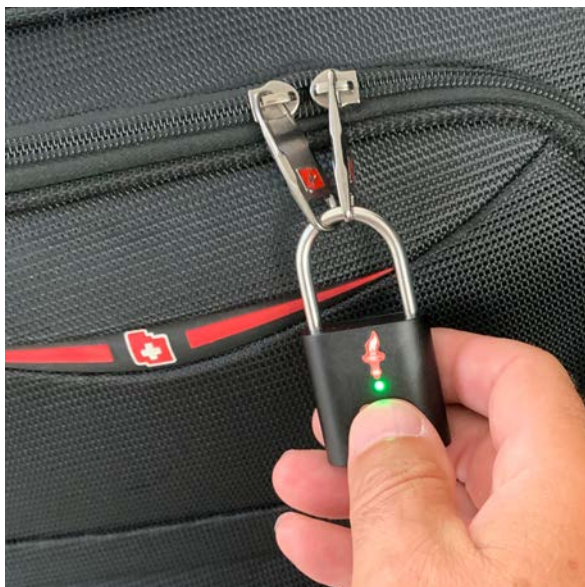

Pred Technologies USA Inc.

© 2020 PRED Technologies USA Inc. All Rights Reserved.

Features specifications and appearance are subject to change with out notice.

Manufactured & Distributed by:

PRED Technologies USA Incorporated.

7855 Fay Avenue, La Jolla, CA 92037

predtechnologies.com

TOKK™

Fingerprint Padlock (TSA)



Fingerprint



 
Long Standby Time



USB Charge



TSA

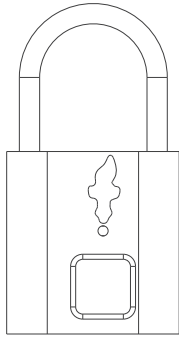

I . USB Interface:

The product is charged by USB. Please fully charge the product for the first time.

II . LED

Use 3-color LED. Different LED represents different mode.



Components:


- 1. USB Port
- 2. Fingerprint Sensor
- 3. LED
- 4. Shackle
- 5. TSA keyhole

LED	Function	Mode
	Red light flashes	Failed to collect fingerprint
	Green light flashes	Fingerprint collection mode/ Unlocked successfully
	Green light on	Collect fingerprint successfully
	Blue light on	Admin fingerprint authorization
	Blue light flashes	Restore factory mode
	Red light on	Delete fingerprint mode


Remarks:

- 1. The Green light on when unlocked successfully means there is no fingerprint in the lock.
- 2. The red light flash when the lock is in low battery, please recharge in time. The red light is on when recharging. Light off when fully recharged.

 III. How to Collect the First Fingerprint

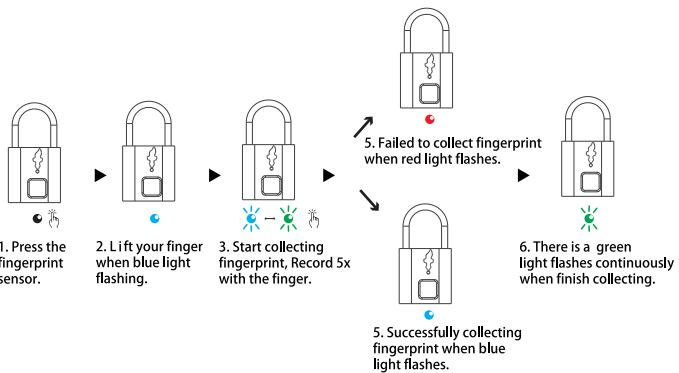

 IV. How to Collect The 2nd to 10th Fingerprints

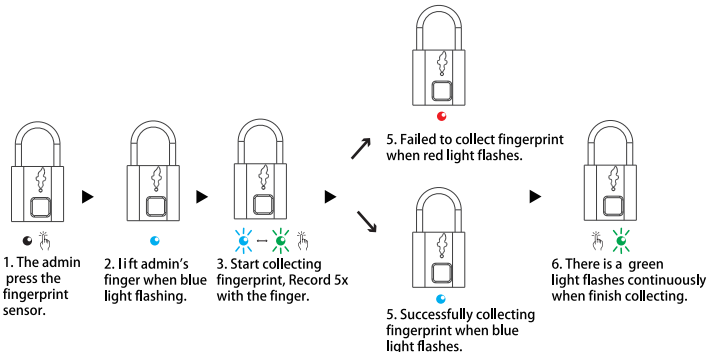


Remarks:

- 1. The first and second fingerprints are the admins by default.
- 2. One of the admins fingerprint will be need to authorize when adding fingerprints.

V. How to Delete Fingerprints

VI . Specifications

 Support 360 degree angel fingerprint recognize
 Resolution: 508DPI
 ESD: +/-12kV air, +/-8kV contact
 FRR: <1%
 FAR: <0.002%
 Recognize time: <300mS
 Battery: 5V 60mAh
 Charger: 5V 100mA

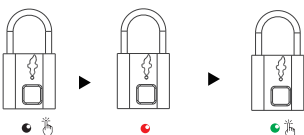

Remarks:

All fingerprints is deleted at the one time.

VII. Low Battery Alarm Mode

- A. When in low battery mode, press the fingerprint sensor with registered fingerprint, red light flash 5 times continuously, then green light on and the lock will be open.
- B. When in low battery mode, press the fingerprint sensor with unregistered fingerprint, red light flash 5 times continuously and the light stay red. The lock will not be open and enter standby mode.