

Quick set up guide:


TOKK™

PRED
TECHNOLOGIES™

Rotating Lens Action Camera S70

How to set up

1. Insert Micro SD card (not included) in slot A
2. Plug the USB charging cable into slot B
Charging time: 30 minutes
Battery life: 60 minutes
3. The camera lens rotates clockwise, 180 degrees only, do not force it as this might break it.
4. Remove plastic cover on lens and display.

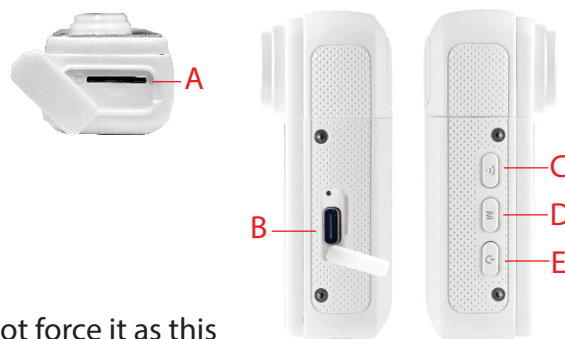

How to operate the Camera (Without App)

1. To Access the Menu:
 - Short Press D
 - To scroll up or down use C or E, to select a setting press D, to go back press D.
 - To exit the Menu long press C
2. To Record a Video (Check 1 to see what Camera mode)
 - Short press E to start and stop
3. To Shoot a picture (Check 1 to see what Camera mode)
 - Change the Camera in Camera Mode, short press C
 - Take a picture: short press E
4. To view recordings (Check 1 to see what Camera mode)
 - Change the camera into viewing mode, short press C
 - To view short press D
5. To return to the camera mode long press C (Check 1 to see what Camera mode)



Scan the code to download the "Roadcam" App



The lens can rotate 180°

Download the free App "Roadcam" (with App)

1. To access more features, check the full instruction manual.

Pred Technologies USA Inc.
4901 Morena Boulevard
suite 206
San Diego CA 92117

www.Tokktech.com
service@predtechnologies.com
Tel +1 858 999 2114

PRED
TECHNOLOGIES™